





Aufbauanleitung

Montagesatz für die Traversenmontage

- 7073629

nur beim
58mm Holm






1

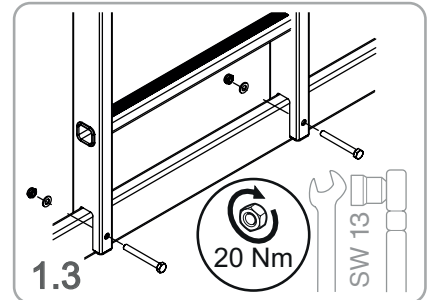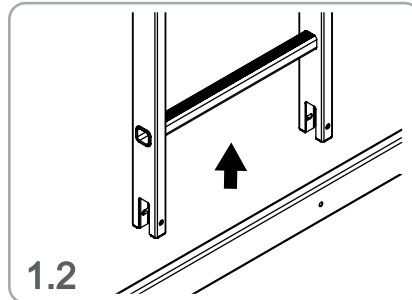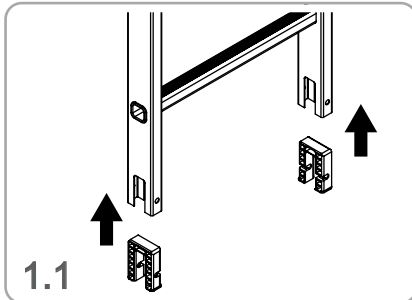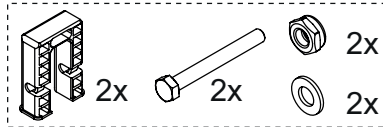

- 7475418
- 7475436
- 7475405

bei 72 mm –
98 mm Holm
GFK






2

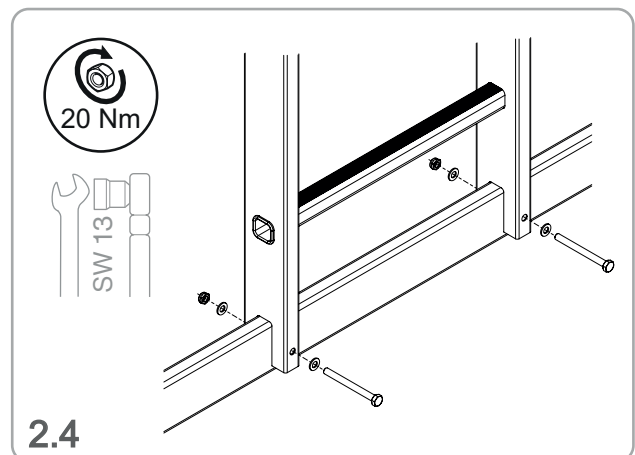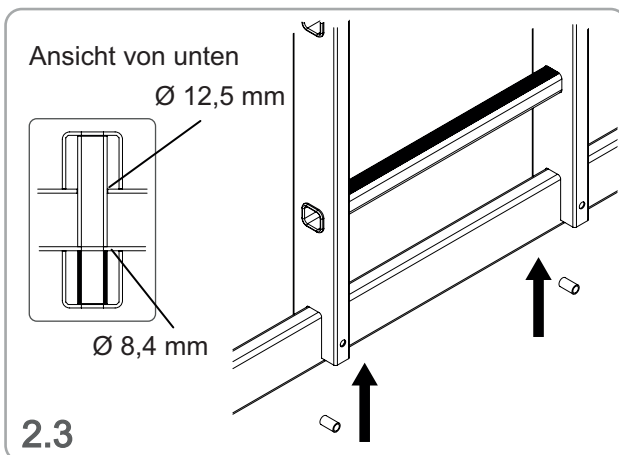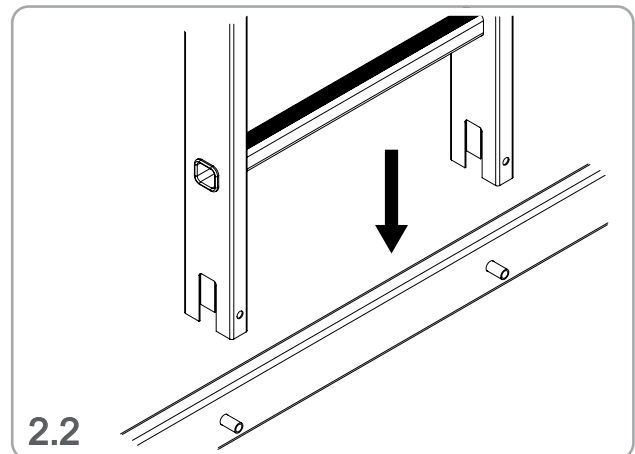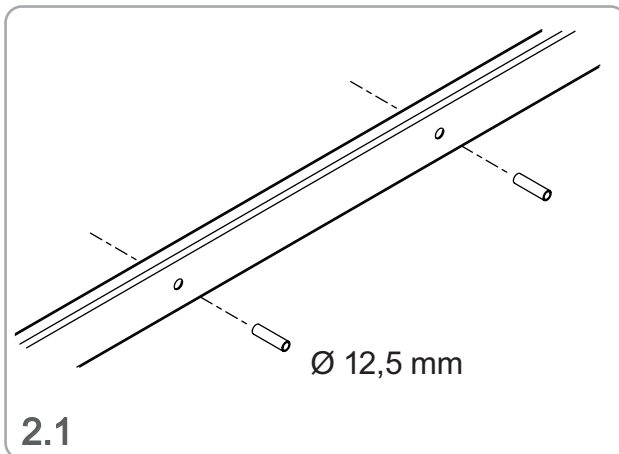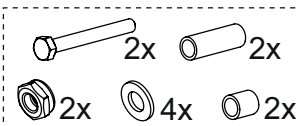

- 7170878
- 7170879
- 7206120
- 7073372
- 7206153
- 7206292
- 7206180






bei 72 mm –
98 mm Holm

3

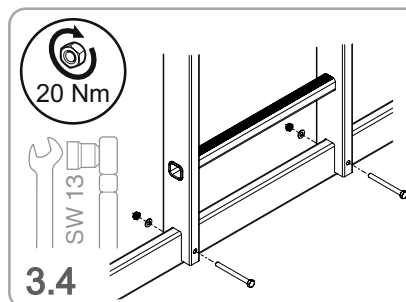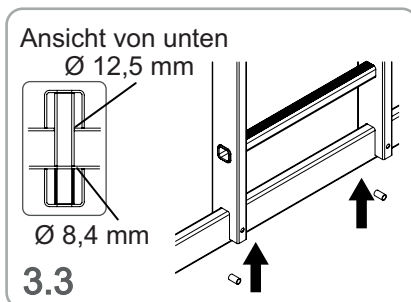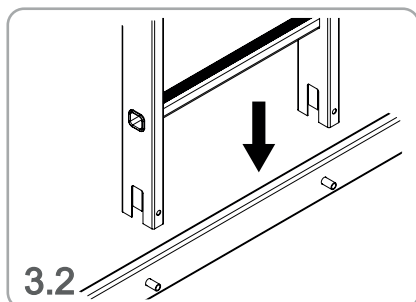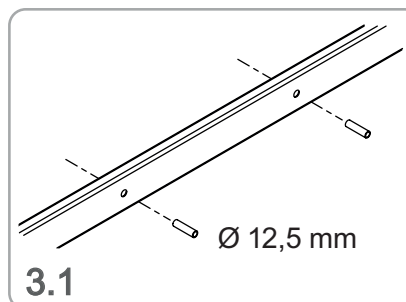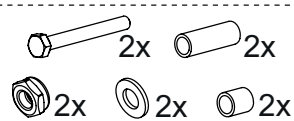

- 7436259

4

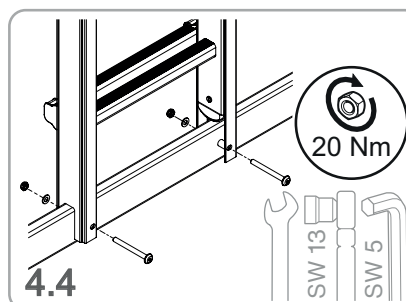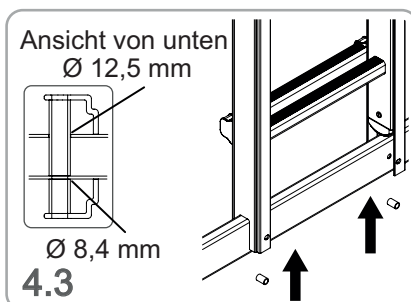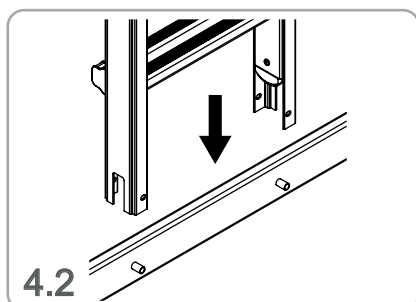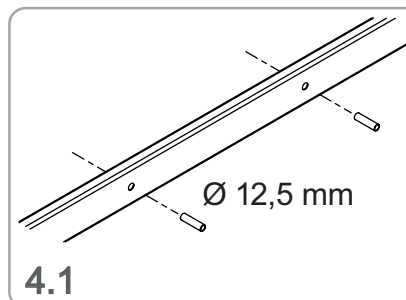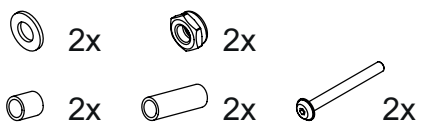

- 7553362
- 7565380
- 7566077

5

